


# SAW VISE

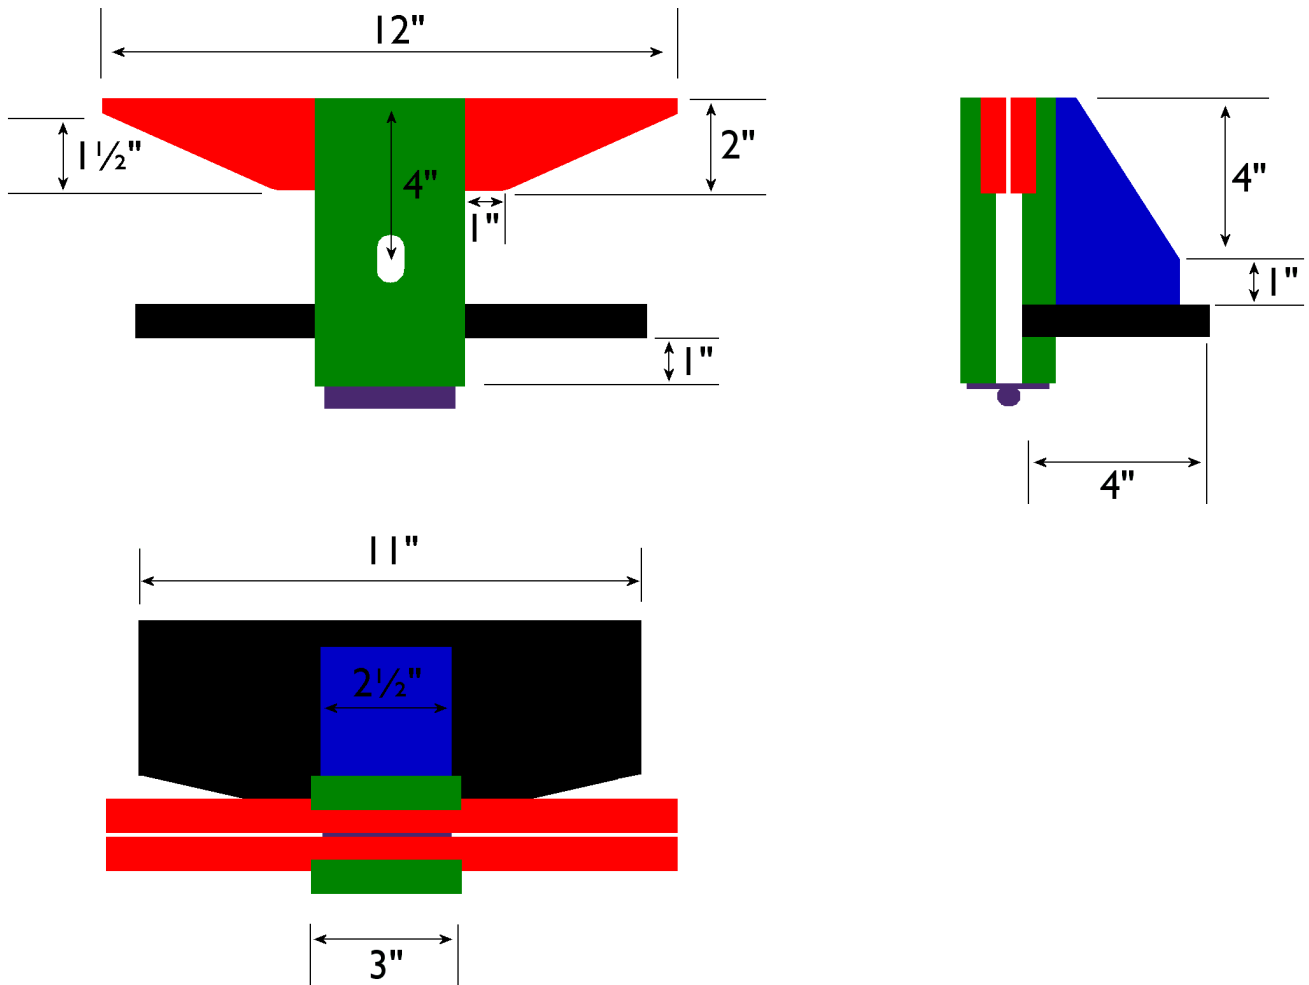

All timber  $\frac{3}{4}$ " thick unless stated.

The base, shown in black, may be clamped to a workbench or this, along with the support (blue), may be omitted and the whole thing held in a bench vise.

The jaws (red) should be planed so that their upper edges meet first and also slightly hollow so that the outer ends meet before the central part.